

5. “T-type” Tire

A: NOTE

“T-type” tire for temporary use is equipped as a spare tire.

CAUTION:

- Do not drive at a speed greater than 80 km/h (50 MPH).
- For the model with tire pressure monitoring system, the indicator light may illuminate after blinking 25 times when running with the T-type tire.

B: REPLACEMENT

Refer to “Aluminum Wheels” for removal and installation procedures of the “T-type”. <Ref. to WT-8, REMOVAL, Aluminum Wheel.>

CAUTION:

The “T-type” tire is only for temporary use. Replace with a conventional tire as soon as possible.

C: INSPECTION

- 1) Check the tire air pressure.

Specifications:

420 kPa (4.2 kg/cm², 60 psi)

- 2) Take stones, glass, nails, etc. out of the tread groove.
- 3) Check the tires for deformation, cracks, partial wear, or wear.

CAUTION:

Replace the tire with a new part if defective.